
MARQUIS

Mounted Mirror


Duragrain Mounted Mirror 600mm

Note:
- To avoid scratching the mirror please make sure all screws are counter sunk and below the surface of split batten.


PROFILE

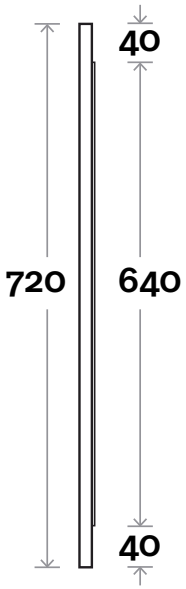

INSTALLATION

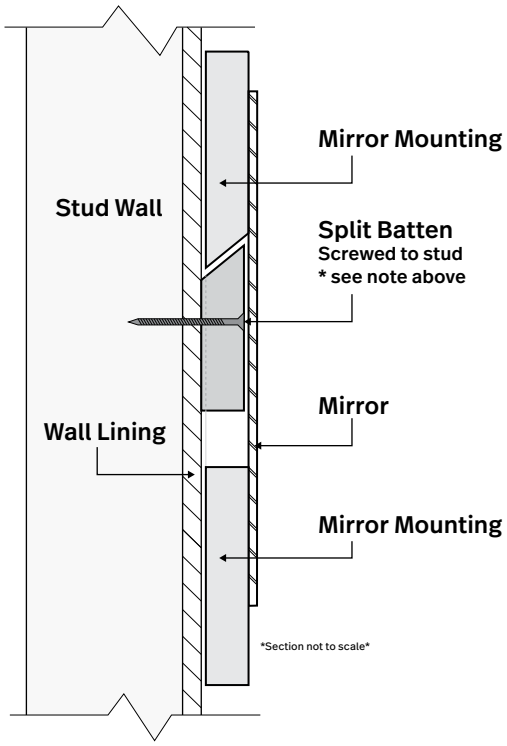

CONFIGURATION

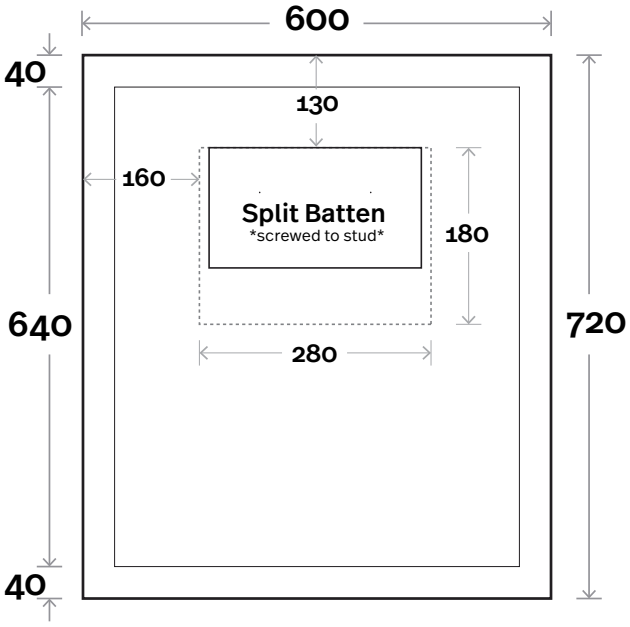

Latest version 14/07/2025

All measurements are in 'mm' and are approximate and to be used as a guide only. Installation preparations are not recommended without product onsite.


MARQUIS

Mounted Mirror


Duragrain Mounted Mirror 750mm

Note:
- To avoid scratching the mirror please make sure all screws are counter sunk and below the surface of split batten.


PROFILE

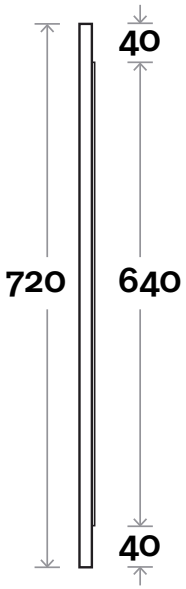

INSTALLATION

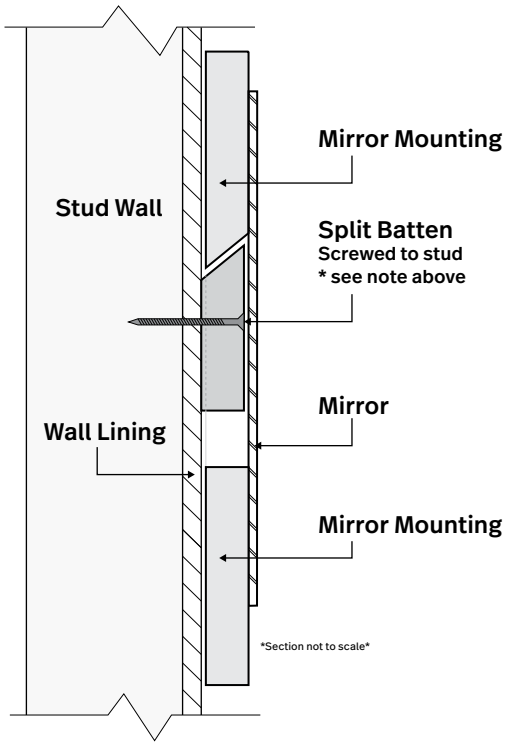

CONFIGURATION

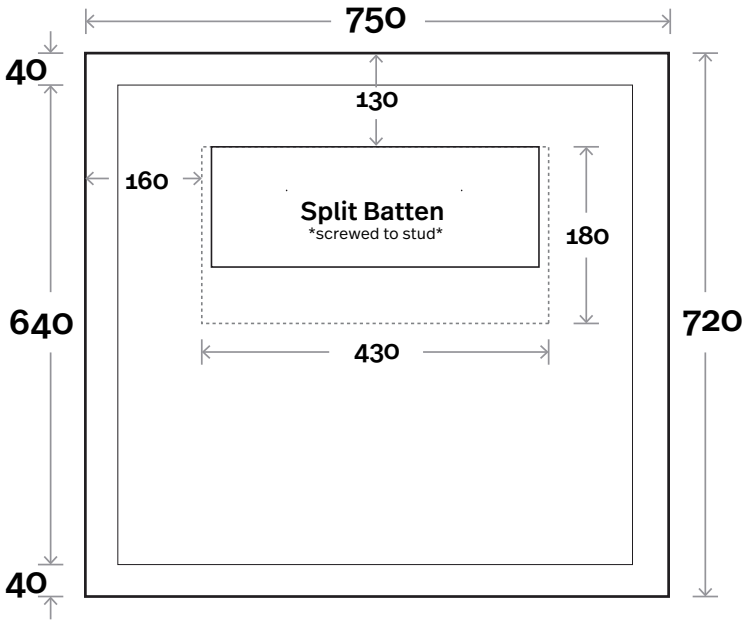

Latest version 14/07/2025

All measurements are in 'mm' and are approximate and to be used as a guide only. Installation preparations are not recommended without product onsite.


MARQUIS

Mounted Mirror


Duragrain Mounted Mirror 900mm

Note:
- To avoid scratching the mirror please make sure all screws are counter sunk and below the surface of split batten.


PROFILE

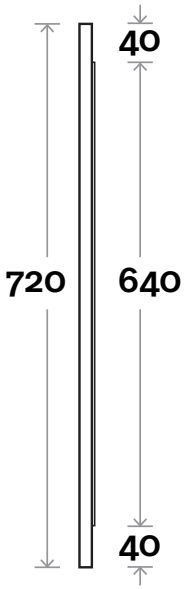

INSTALLATION

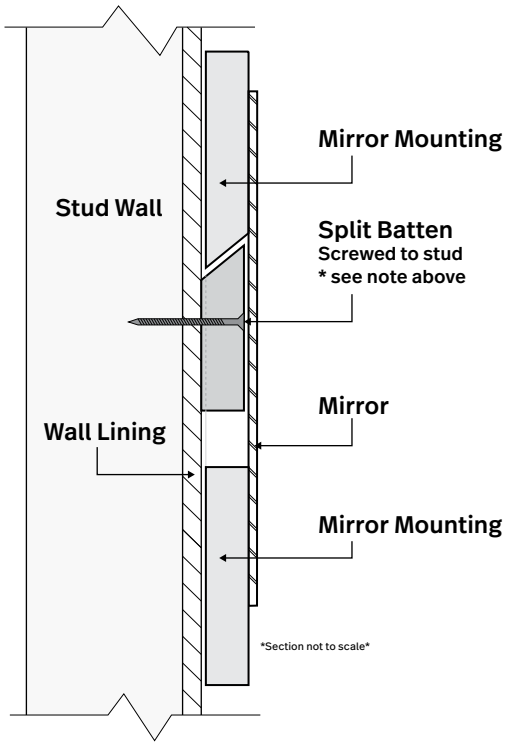

CONFIGURATION

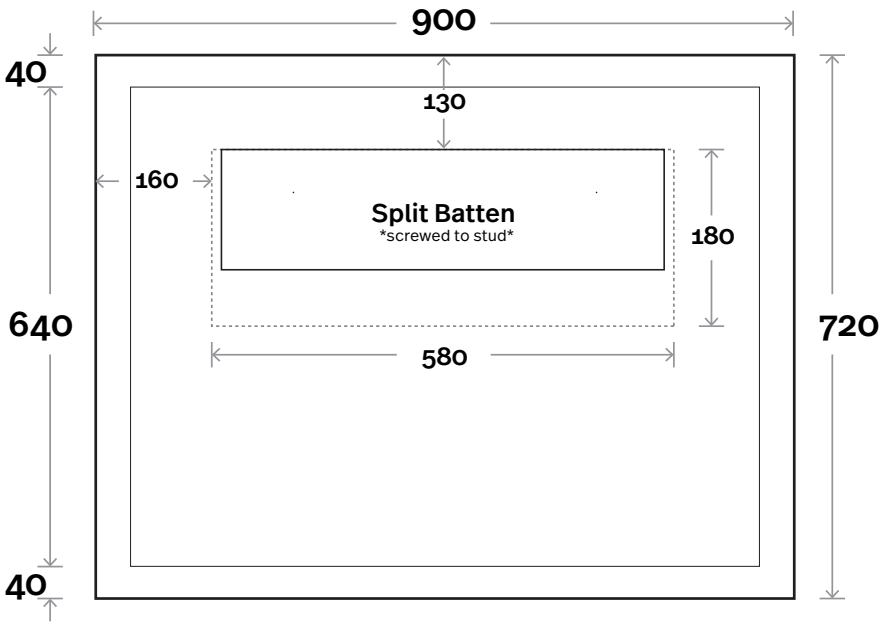

Latest version 14/07/2025

All measurements are in 'mm' and are approximate and to be used as a guide only. Installation preparations are not recommended without product onsite.


MARQUIS

Mounted Mirror


Duragrain Mounted Mirror 1200mm

Note:
- To avoid scratching the mirror please make sure all screws are counter sunk and below the surface of split batten.


PROFILE

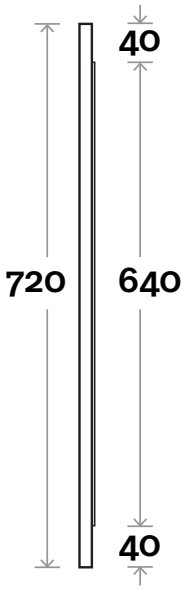

INSTALLATION

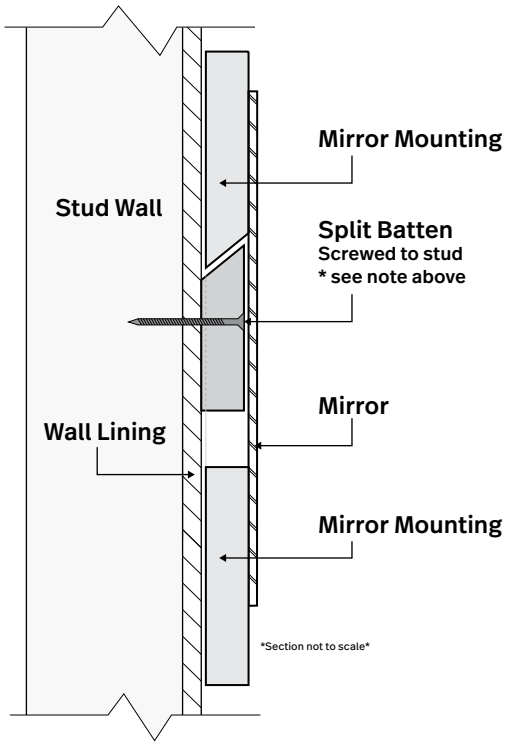

CONFIGURATION

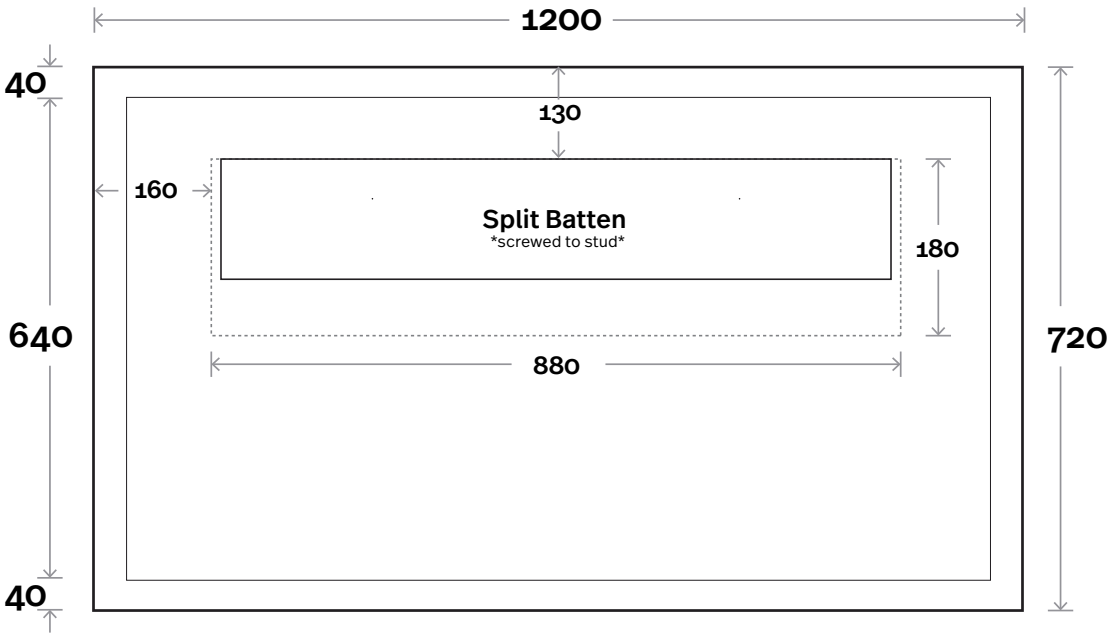

Latest version 14/07/2025

All measurements are in 'mm' and are approximate and to be used as a guide only. Installation preparations are not recommended without product onsite.


MARQUIS

Mounted Mirror


Duragrain Mounted Mirror 1500mm

Note:
- To avoid scratching the mirror please make sure all screws are counter sunk and below the surface of split batten.


PROFILE

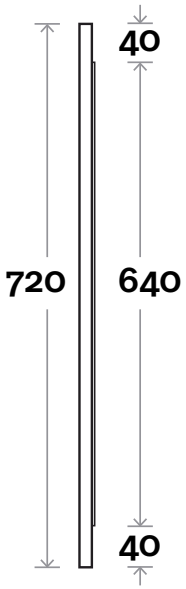

INSTALLATION

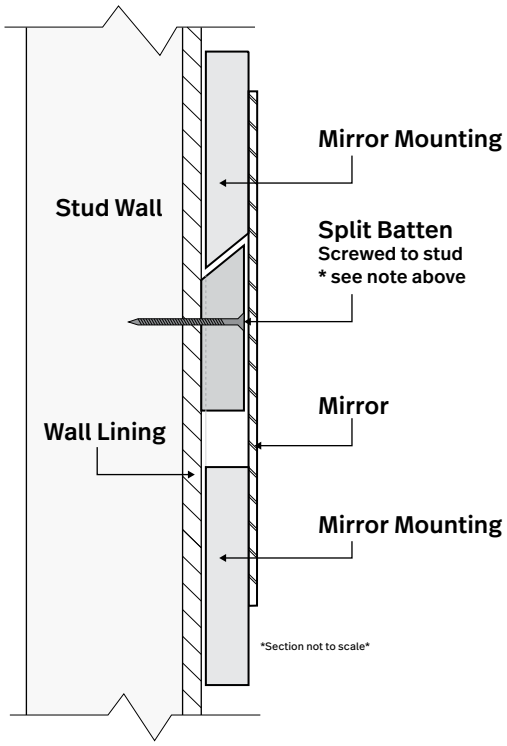

CONFIGURATION

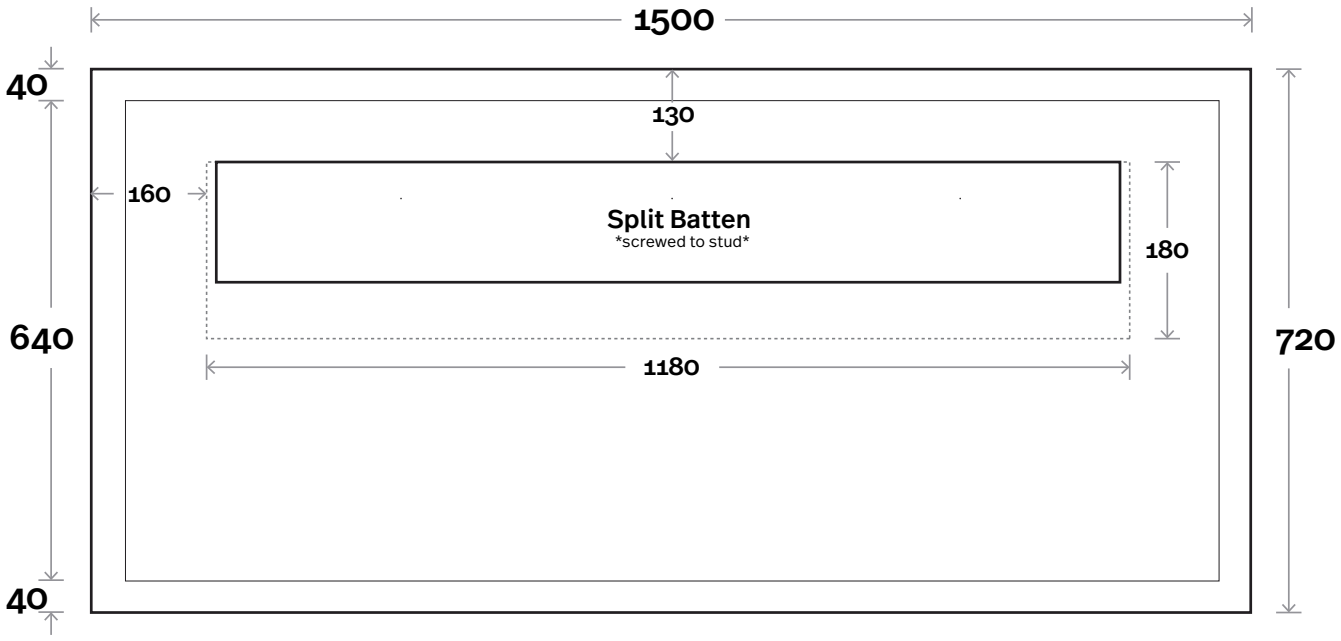

Latest version 14/07/2025

All measurements are in 'mm' and are approximate and to be used as a guide only. Installation preparations are not recommended without product onsite.


MARQUIS

Mounted Mirror


Duragrain Mounted Mirror 1800mm

Note:
- To avoid scratching the mirror please make sure all screws are counter sunk and below the surface of split batten.


PROFILE

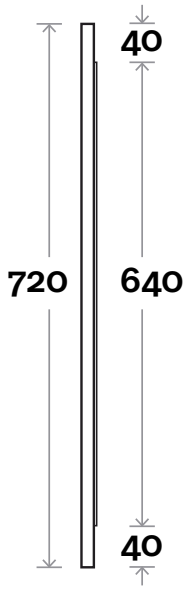

INSTALLATION

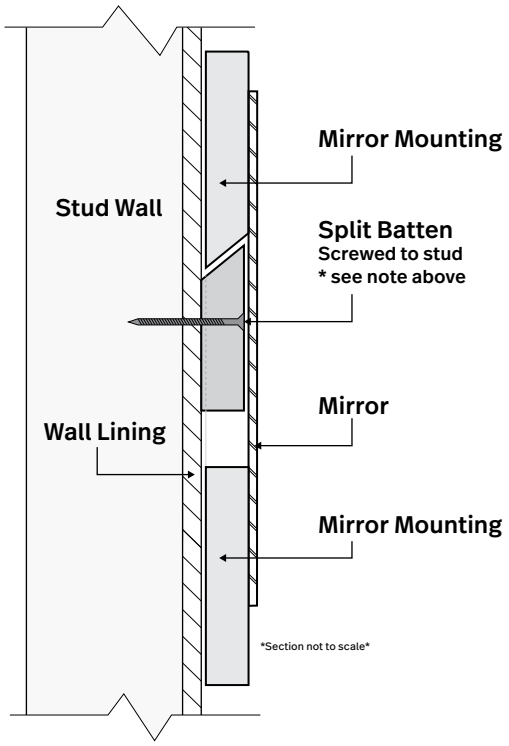

CONFIGURATION

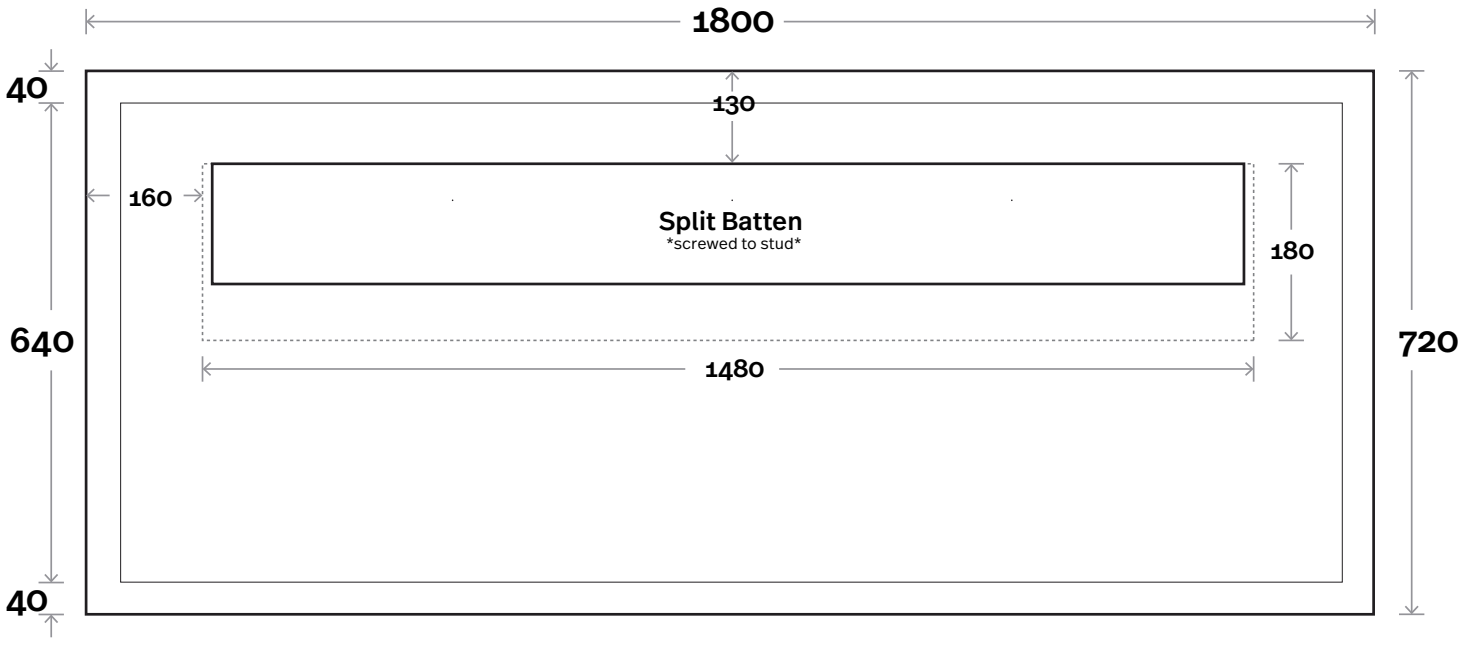

Latest version 14/07/2025

All measurements are in 'mm' and are approximate and to be used as a guide only. Installation preparations are not recommended without product onsite.